





Snap Together Rubber Flooring Mat, Skymaster® HD, Niru® FR, 465

Product Images

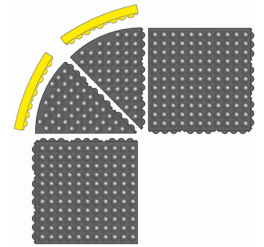

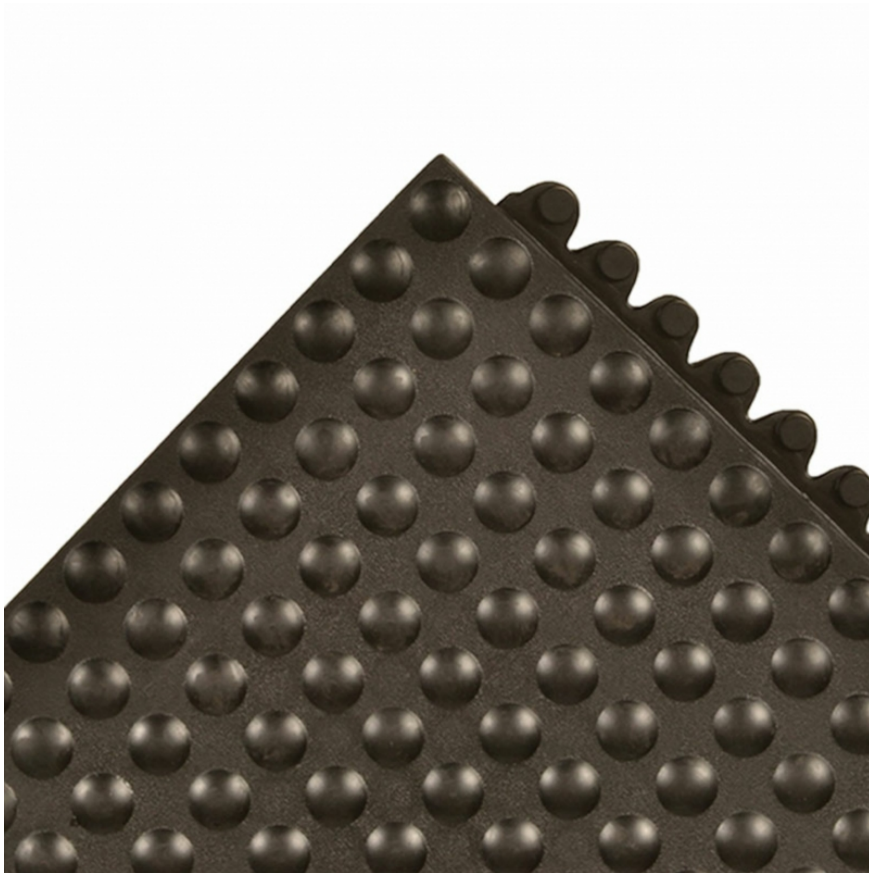

Short Description

- Resilient fire retardant Nitrile rubber compound and unique support design offers exceptional fatigue relief
- Bubble top surface for added comfort that is easy to clean
- Easy to snap together mats on-site for custom work station platforms
- Nitrile provides highest level of resistance to chemicals, oils and greases
- Compatible with any of the Skymaster® HD family of mats
- #461 Skymaster® HD Ramps and #469 Safety Line available

Description

Skymaster® HD Niru® FR is a fire retardant, heavy duty nitrile rubber compound mat for industrial strength that provides the highest degree of resistance to chemicals, cutting fluids, animal fats, oils and greases. Snap together tiles of 3'x3' can be easily assembled for coverage of large areas or individual workstations. Ergonomic benefit derived from a 5/8" thick worker platform with a bubble pattern for maximum fatigue relief in dry industrial environments. The unique design and craftsmanship make the mat easy to handle and easy to install on site. A tooled grid of 12"x12" sections on the underside of the mat makes further customization quick and easy. Available beveled edges prevent tripping and allow inside and outside corners. Range of accessories including Skymaster® HD Yellow Safety line™ and Skymaster® HD i-Curve™ and Skymaster® HD o-Curve™ series.

Specifications

| | |
|-------------------------|---|
| Model No | 465S0033BL |
| Color | Black |
| Dimensions | 3ft x 3ft |
| Thickness | 5/8in |
| UPC | 662641848108 |
| Available Colors | Black |
| Overall Thickness | 5/8 |
| Standard sizes | 3'x3' |
| Group | Ergonomic, Anti-fatigue & Safety Matting |
| Environment | Dry Areas |
| Special Characteristics | Available yellow borders along sides comply with OSHA code 1910-144 Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals Resistant to most chemicals |
| Recommended Use | For placement in manufacturing plants, assembly lines, picking, packing and logistics warehouses, individual work stations. |
| Special Remarks | Fire retardant heavy duty Nitrile rubber compound that can be used with all Skymaster® HD series of products. Use Skymaster® HD i-Curve™ and Skymaster® HD o-Curve™ to continue around curved workstations |
| Surface | Industrial Bubble Pattern |
| Edges | Attachable beveled edges are available |
| Usage Intensity | Heavy duty |
| Material Specifications | 100% nitrile fire retardant rubber compound |
| Process | Compression Molding |
| Weight Lbs/sqft | 2.6 |
| Thickness Inch | 5/8in |
| Fire Rating US | Pass |

| | |
|------------------------|---|
| REACH Compliant | Reach compliant (Registration, Evaluation, Authorization and Restriction of Chemicals). |
| Anti-Fatigue Rating | Best |
| Slip Resistance Rating | Best |
| Wear Resistance Rating | Best |