

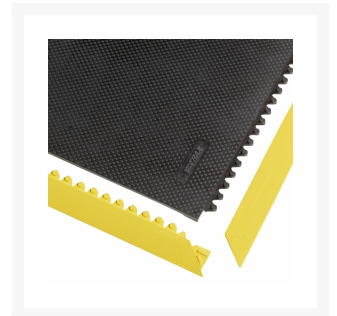


Easy to Snap Mat Ramp Edging Slabmat™ 041

Product Images

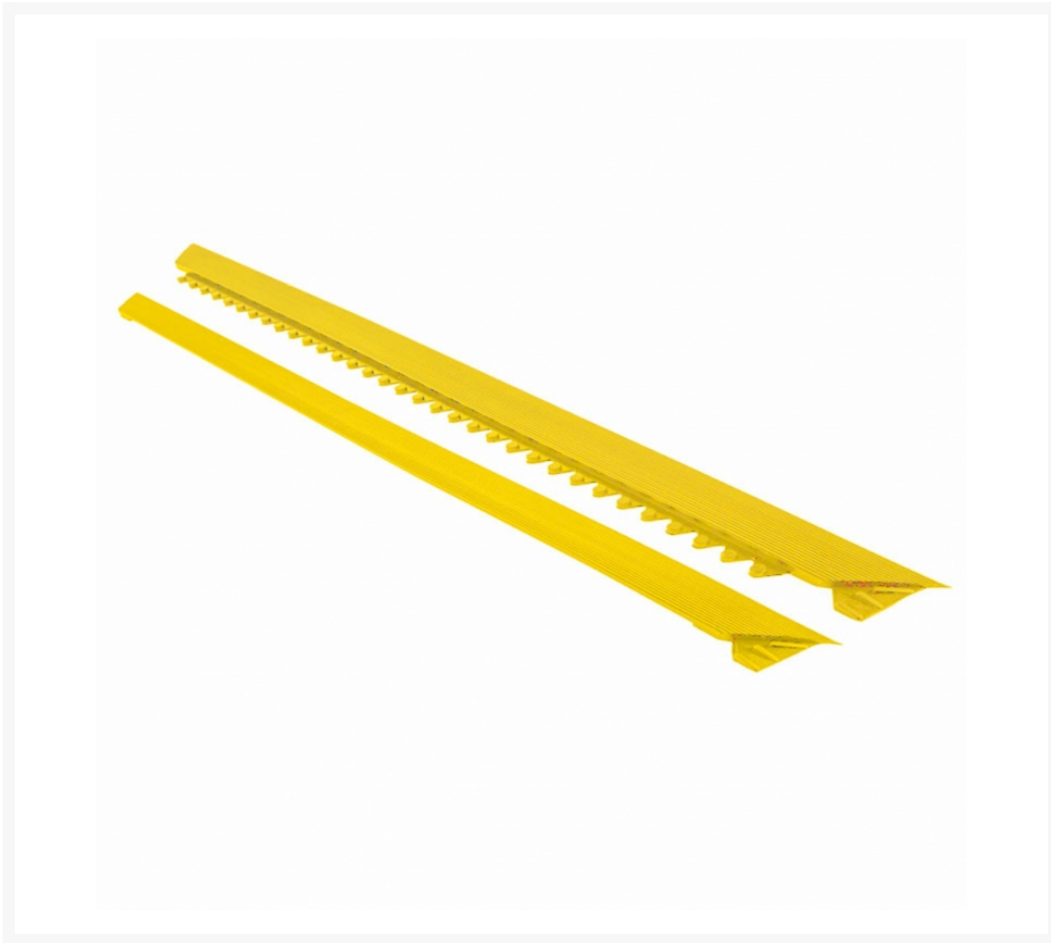

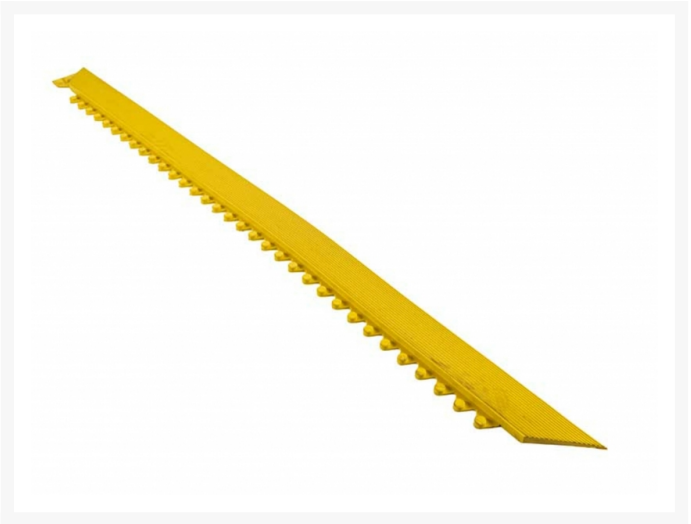

Short Description

- Easy to snap together system for on-site custom work station platforms
- Nitrile provides highest level of resistance to chemicals, oils and greases
- Compatible with Slabmat™ products
- Available as 2 foot long male/female ramps

Description

The Slabmat™ Safety Ramp is designed for use with the Slabmat™ floor mat and provides a 2" beveled edge for easy access onto or off of the work platform. Made from a 100% nitrile base rubber compound Slabmat™ Safety Ramp provide the highest resistance to chemicals, cutting fluids, animal fats, oils and greases. All ramp lengths fit the male/female interlocking system on the mats and are beveled and molded with mitered corners and a protruding tab that locks together the two adjoining ramps for a secure, professional corner. Square edges can be achieved by trimming off the miter using the cut line on the bottom of the ramp.

Specifications

Model No	041
Available Colors	Black; Yellow
Overall Thickness	1/2
Standard sizes	2"x 36"
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Dry Areas
Special Characteristics	Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals Resistant to most industrial oils
Recommended Use	For placement in manufacturing plants, assembly lines, picking, packing and logistics warehouses, individual work stations.
Special Remarks	All ramp lengths are beveled and molded with mitered corners and a protruding tab. The tab locks together the two adjoining ramps for a secure, professional corner.
Surface	Ribbed
Edges	Attachable beveled edges are available
Usage Intensity	Heavy duty
Material Specifications	100% Nitrile rubber
Process	Compression Molding
Weight Lbs/sqft	1.3
Fire Rating US	Pass
REACH Compliant	Reach compliant (Registration, Evaluation, Authorization and Restriction of Chemicals).
Anti-Fatigue Rating	Good
Slip Resistance Rating	Better
Wear Resistance Rating	Superior

Product Options

Color:	Black
	Yellow
Variant:	Female
	Male