


Interlock Drainage Anti-Fatigue Mat Grit-Step™ 505

Product Images

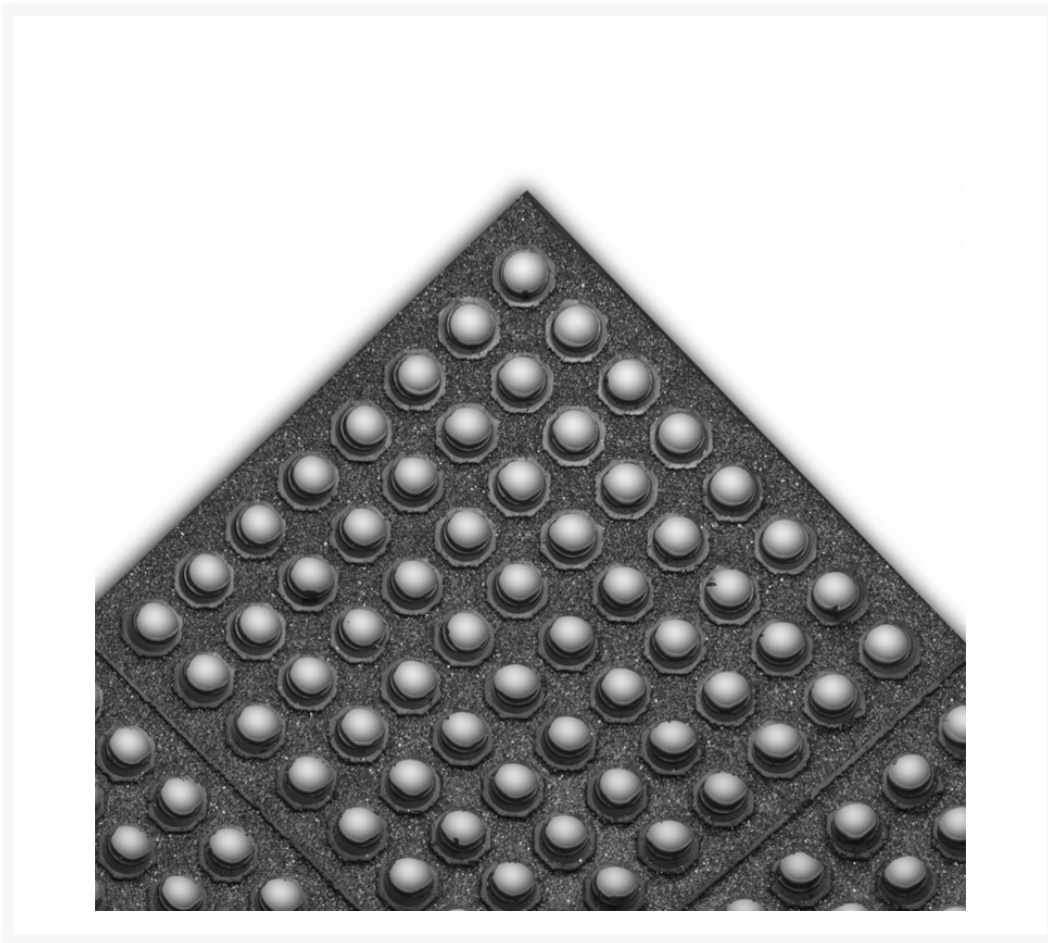

Short Description

- Rubber compound and unique multi-nib support design offers fatigue relief
- Large hole drainage design keeps moisture and debris free away
- Easy to snap-together system for on-site custom work station platforms
- Silicon Carbide grit surface
- 551 M.D. Ramp System[®] and 552 extra wide M.D.-X Ramp System[™] available

Description

Grit-Step™ is a modular anti-fatigue matting system made with a general purpose rubber compound with a drainage top anti-slip surface texture and a multi-nib backing for comfort and ergonomic support of the mat. Grip-Step™ has a silicon carbide grit surface for extreme traction in the harshest of work environments. Large holes provide excellent drainage and aeration leaving a dry, clean work area. Also compatible with NoTrax® M.D. Ramp System® for easy on-site custom configurations and trip-resistant platforms.

Specifications

Model No	505S0033BL
Color	Black
Dimensions	3ft x 3ft
Thickness	3/4in
UPC	662641818569
Brand	NoTrax
Overall Thickness	3/4
Standard sizes	3'x3'
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Wet/Dry and Oily Areas
Special Characteristics	Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals
Recommended Use	For placement in manufacturing plants, production lines, assembly lines, CNC machines, metal working for individual workstations and custom work platforms
Special Remarks	Easy to make custom configurations on-site by utilizing the #551 M.D. Ramp System®. Grit products are not intended for use in food service/processing applications.
Edges	Attachable beveled edges are available
Usage Intensity	Light duty
Custom Description	Available #551 M.D. Ramp System® or #552 M.D.-X Ramp System™ attachable ramps
Installation	Interlocking mats allow on-site customization. Square snap-together units can be assembled effortlessly.
Material Specifications	Natural rubber
Surface Detail	Large Drainage Holes
Process	Compression Molding
Pallet Quantity	36
Weight Lbs/sqft	2.6

Thickness Inch	3/4in
Fire Rating US	Pass
Anti-Fatigue Rating	Good
Slip Resistance Rating	Good
Wear Resistance Rating	Good

Prop 65

⚠️WARNING: This product can expose you to beryllium which is known to the State of California to cause cancer. For more information, visit www.P65Warnings.ca.gov.