


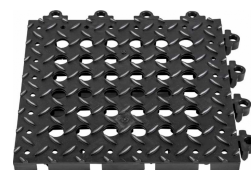
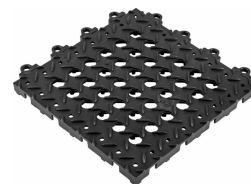
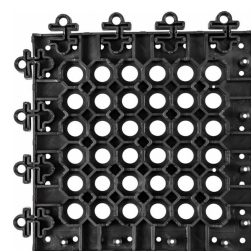
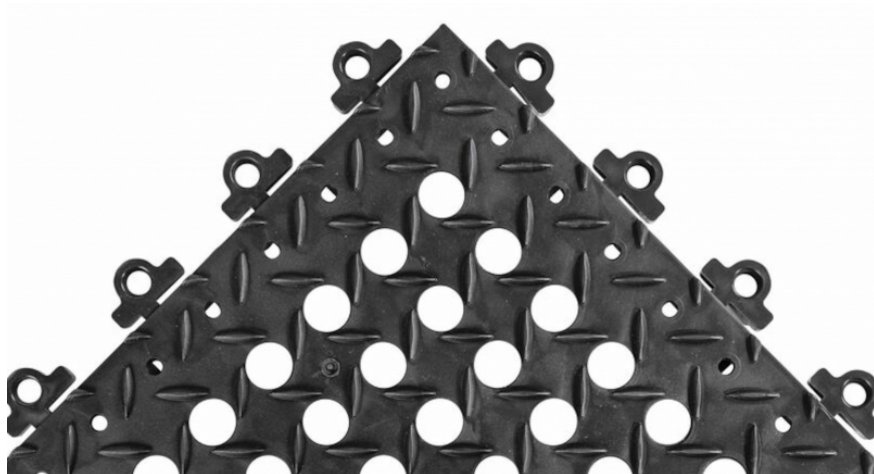


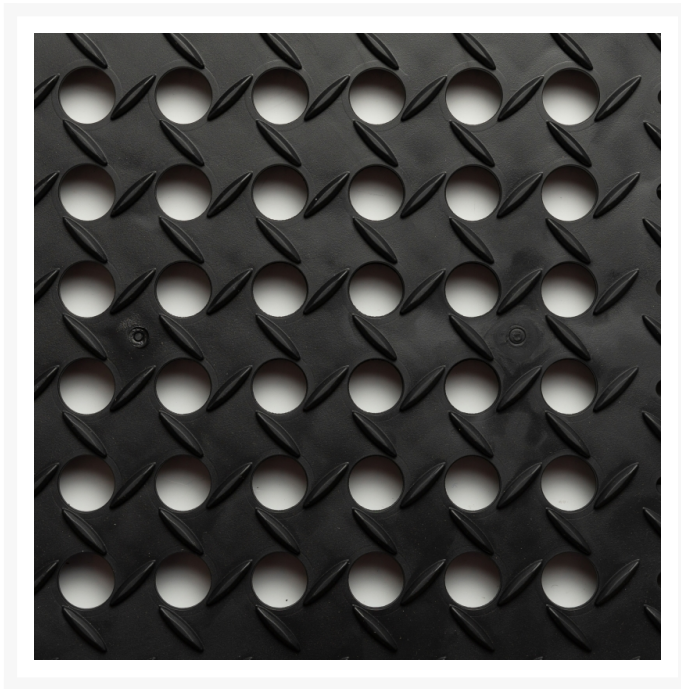

# PVC Modular Floor Tiles, Drainage, Diamond Flex-Lok™, Tile 620

## Product Images

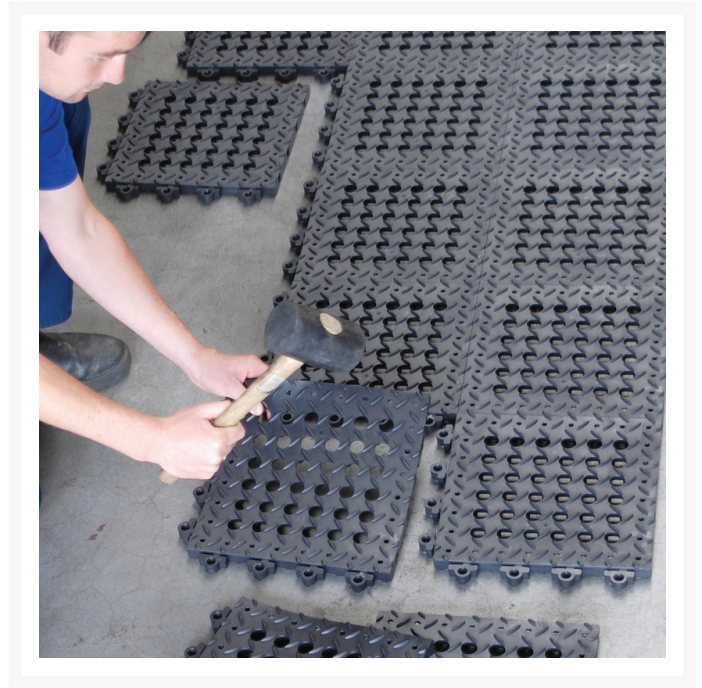

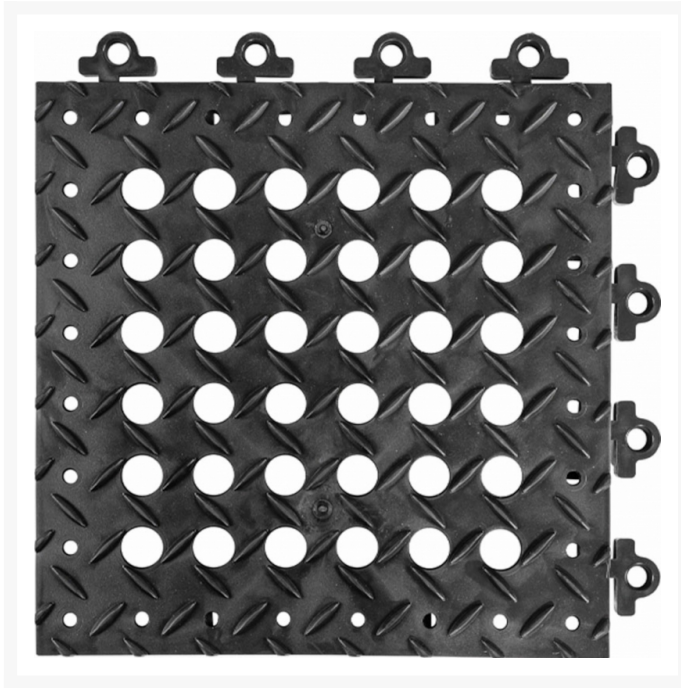

## Short Description

---

- Allows you to customize and layout your matting environment as one floor, without trip hazards. Create workstation or your own custom configuration.
- PVC drainage modular interlocking tile with raised diamond top surface for traction and greater resistance to industrial chemicals
- Ergonomic, multi-tiered design allows liquid to continuously flow underneath the mat and allows the underside to breathe. Elevates the mat from the floor.
- Spring-back design, engineered to cushion the impact of long-term standing. Allows the mat to flex with the weight of the worker.
- Holes allow for not only liquids, cutting fluids, etc., but also debris, shavings and particles to pass

through the mat

- Black tiles & ramps made from 100% recycled PVC
- Accessories: 12x12" Tile (black only) 6x12" Ramps 6x6" Corners

## Description


---

Diamond Flex-Lok™ is a high-performance modular matting system that combines the durability and toughness of an industrial mat with true ergonomic support and comfort. The ergonomic properties of Diamond Flex-Lok™ are the result of a multi-tiered footing design that elevates the mat off the floor, creating air pockets that allow the mat to flex with the weight of the worker. A large hole drainage system facilitates the removal of liquids and debris from the work area while a pronounced raised diamond pattern on the mat surface, and an inverted-V pattern on the ramps provide additional traction. Diamond Flex-Lok™ is manufactured from 100% recycled PVC for greater resistance to industrial chemicals, cutting fluids, oils and greases. A unique interlock system that comes apart only when you want it to allows for easy reconfiguration. Create your own workstation configuration or select an assembled stock size. Available configuration pieces: [PVC Diamond Flex-Lok™ Corner 620](#) [PVC Diamond Flex-Lok™ Ramp 620](#)

## Specifications

Model No	620-Tile
Available Colors	Black
Overall Thickness	1
Standard sizes	12"x 12"
Group	Ergonomic, Anti-fatigue & Safety Matting
Environment	Wet/Dry and Oily Areas
Special Characteristics	Available yellow borders along sides comply with OSHA code 1910-144   Free of DOP, free of DMF, free of ozone depleting substances, free of silicone and free of heavy metals
Recommended Use	In manufacturing plants, production lines, assembly lines, CNC machines, metal working, fabrication
Special Remarks	Drainage hole size is 1/2" diameter. Factory-assembled custom configurations available - Call Customer Service for more information (800) 621-2802
Surface	Industrial Diamond Plate
Edges	Attachable beveled edges are available
Usage Intensity	Heavy duty
Installation	The modular matting system consists of 12in x 12in modular tiles that interlock for on site installation with a rubber hammer.
Material Specifications	PVC (DOP free)
Process	Injection Molding
Weight Lbs/sqft	2.1
REACH Compliant	Reach compliant (Registration, Evaluation, Authorization and Restriction of Chemicals).
Anti-Fatigue Rating	Superior
Slip Resistance Rating	Superior
Wear Resistance Rating	Superior

# Prop 65

 WARNING: This product can expose you to chemicals including di-2-ethylhexyl phthalate and/or diisononyl phthalate which is known to the State of California to cause cancer, birth defects or reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## Product Options

Dimensions:	1ft x 1ft
UOM:	CS
	EA